


**INSTRUMENT
APPROACH CHART**

AD ELEV 183 ft
HEIGHTS RELATED TO AD ELEV


**FETESTI LRFT
ILS/DME RWY 36**

RUBIN MFIS 130.000	RUBIN GND 127.600	RUBIN APP 125.025	RUBIN TWR 127.600	ATIS 124.200
	APP COURSE 001°	NDB 510 BA	TDZE 173	LDA 2500 m

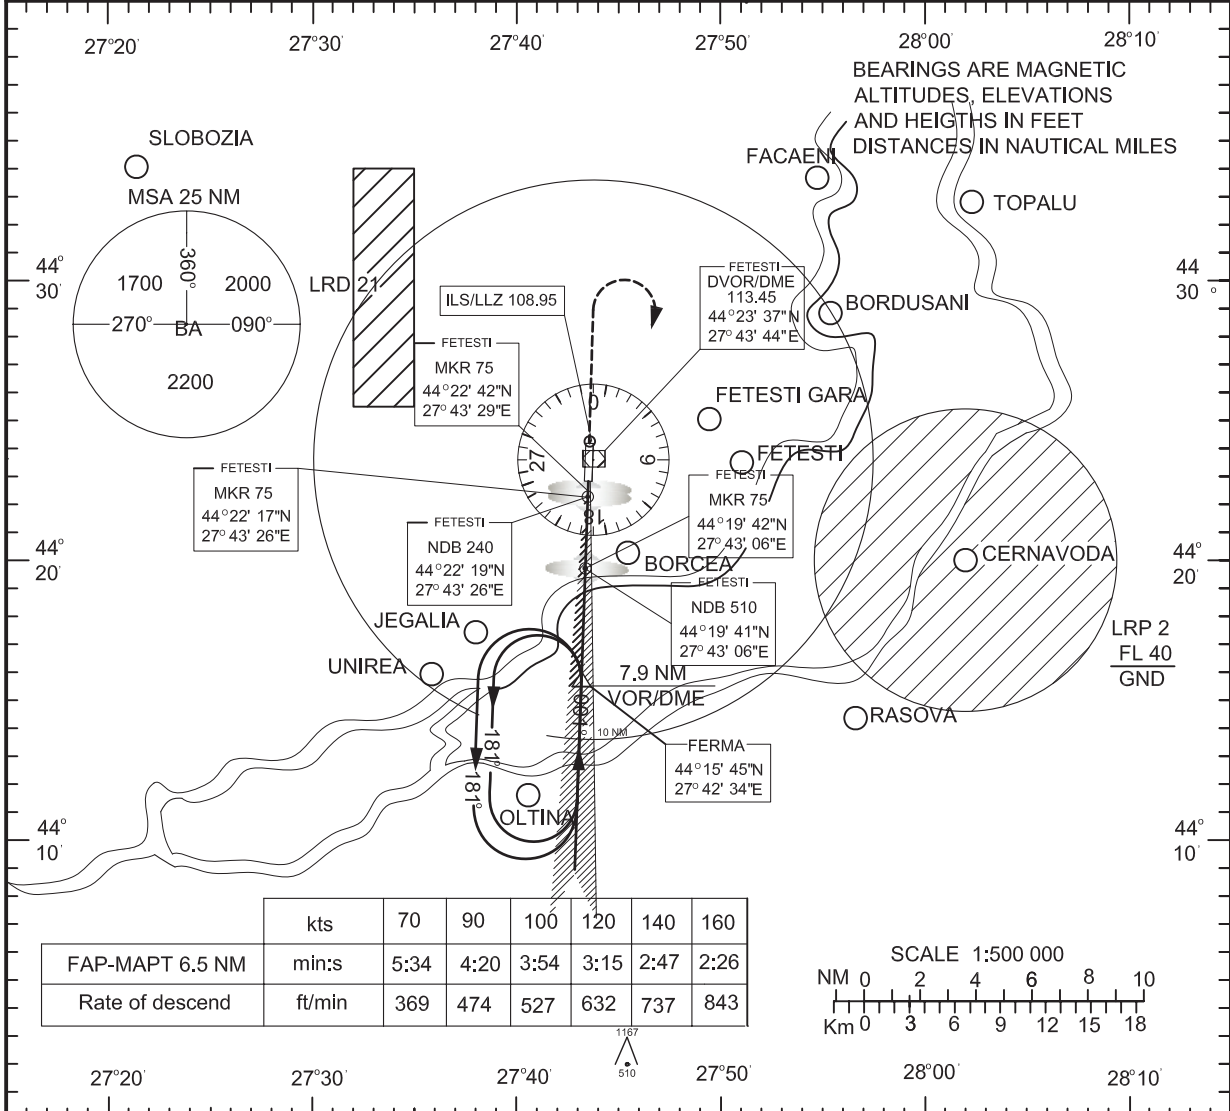

MISSED APPROACH:

Climb on RWY heading 2000 QNH
then turn right climbing to 4000 QNH at
FERMA and hold or as directed

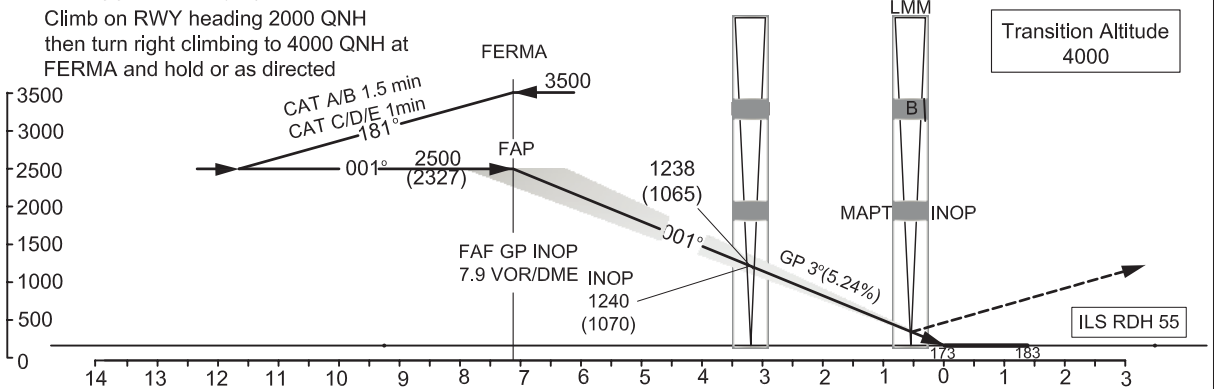

CAT	ILS		ILS GP INOP		CIRCLE TO LAND	
	DA/DH	VIS	MDA/MDH	VIS	MDA/MDH	VIS
A	373/200	800	480/300	1600	575/400	1600
B	373/200	800	480/300	1600	675/500	2000
C	373/200	800	480/300	1600	775/600	2400
D	393/220	800	480/300	2000	875/700	3600
E	393/220	800	480/300	2400	975/800	4400

Distance to VOR/DME (NM)	2	3	4	5	6
ALT (H)	613 (440)	935 (762)	1253 (1080)	1571 (1398)	1889 (1716)